



## NARROW CABINET SIDE BASKET INSTALLATION INSTRUCTIONS

THE INSTALLATION INSTRUCTIONS ARE FOR RIGHT-OPENING CABINETS, IF IT IS A LEFT-OPENING CABINET, JUST INSTALL IT SYMMETRICALLY

### 1 Accessories list

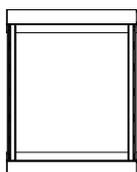


Basket frame×1



Hanging box×2



Divider strips×4

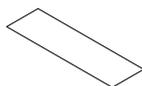

Anti-slip mat×2




Installation card×2




Screws accessories bag×1

### 2 Installation Requirements


Cabinet Size	150	200	250
Width	106mm	156mm	206mm
Depth	460mm	460mm	460mm
Height	580mm	580mm	580mm

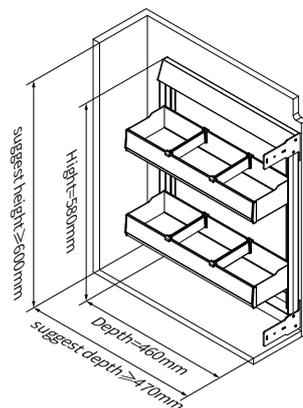


### 1 Disassemble the slide module

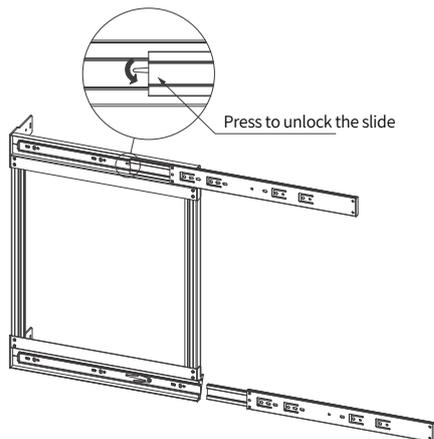


### 2 Drill holes in the inner panel of the cabinet (unit: mm)

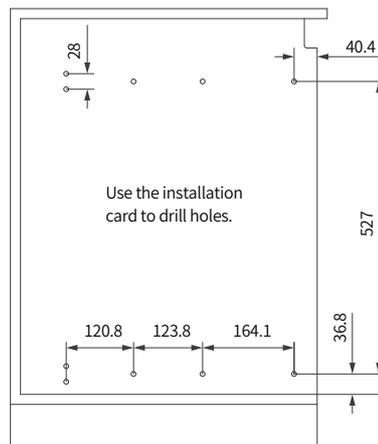


### 3 Fixed slides (Pay attention to the corresponding holes!)

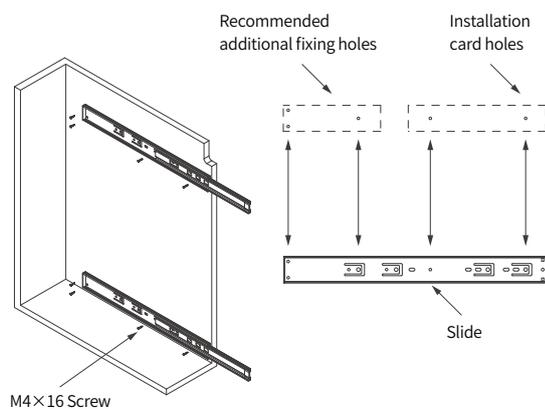


### 4 Slide parallel into the slide rail

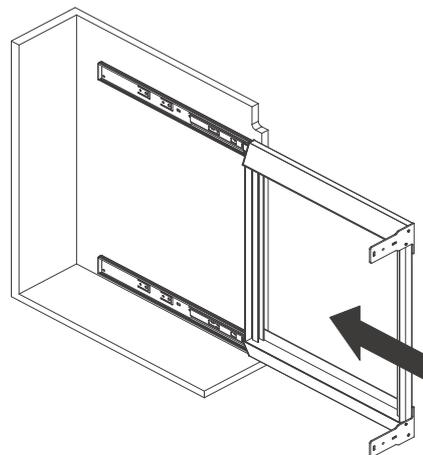


5 Door panel drilling hole(mm)

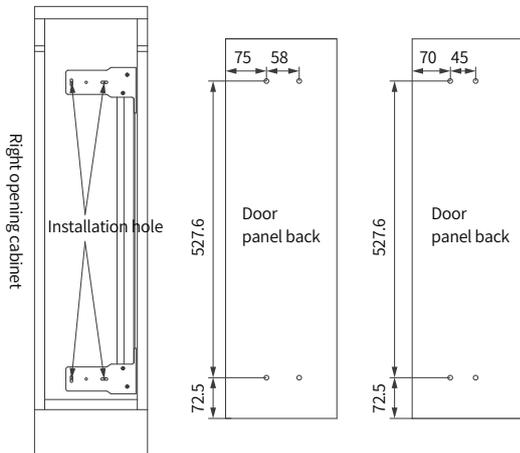


6 Fixed the door panel

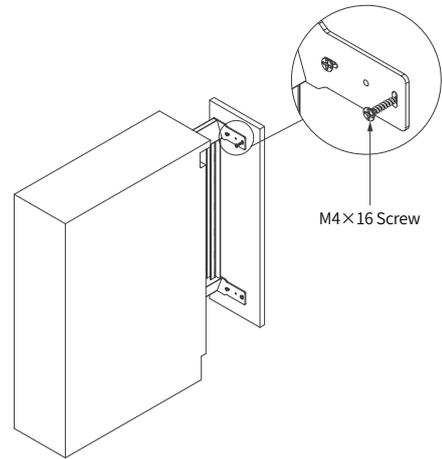


7 Door panel adjustment

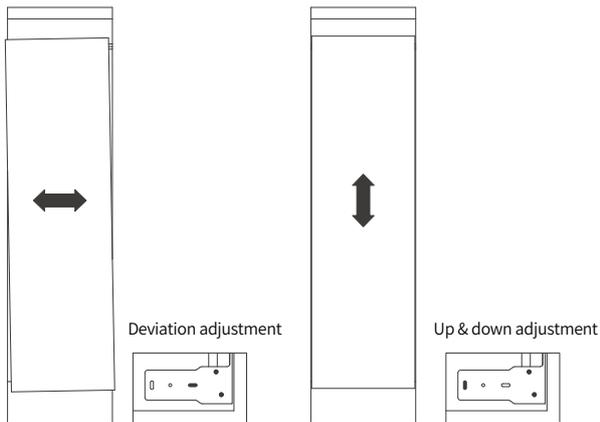

8 Adjustment completed, tighten the door panel

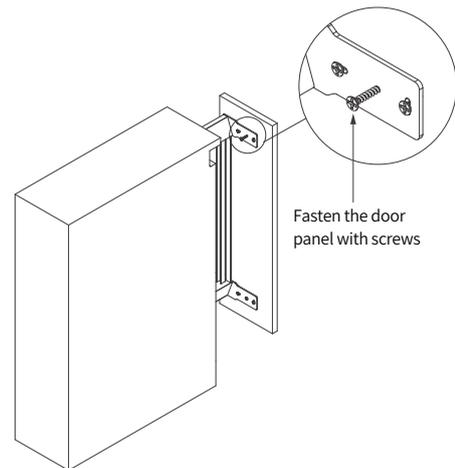

9 Hanging the box

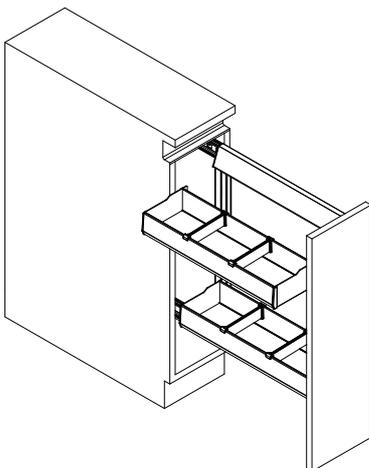

10 Installation Complete

